
Operating instructions (original instructions) 8074097 2017-06 [8074099] 6. Function



Festo SE & Co. KG

Ruiter Straße 82 73734 Esslingen Germany +49 711 347-0 www.festo.com

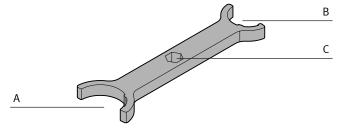

- Fork opening (A) for screw-type locks of sockets M16.
- Fork opening (B) for screw-type locks of sockets M12.
- Tool holder (C) for torque spanner 4.

1. Applicable documents

- $\Box i$ All available documents for this product \rightarrow www.festo.com/pk
- \rightarrow Assembly instructions of the line 3

2. Safety

- Switch off power supply before mounting work.
- Observe applicable documents.


3. Intended use

Attachment of the screw-type lock to the plug connector.


4. Scope of delivery




5. Not in scope of delivery

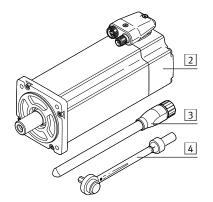

2	Servo motor	(1x)
	EMME-AS	
3	Line	(1x)
	with socket	
	M12/M16	
4	Torque spanner	(1x)

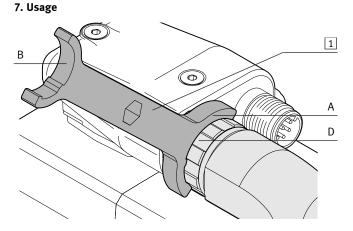


• Apply tool 1 with the correct fork opening (A)/(B) to the screw-type lock (D).

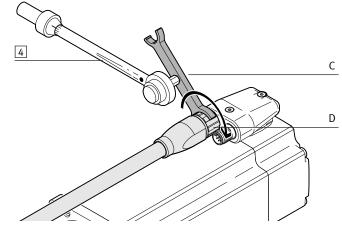

- Place torque spanner 4 in the tool holder (C).
- Tighten the screw-type lock (D). Observe the tightening torque
 (→ Further applicable documents).

7a. For lines 3 with socket M16



 \rightarrow Screw-type lock (D) lies flush with the plug connector flange (E).

