
Controller for Electro-Pneumatic Regulator *IC Series*

How to Order

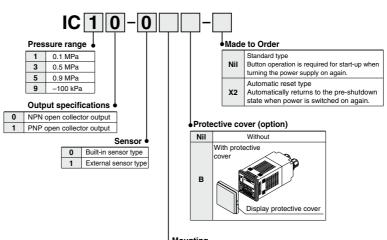


Option

When only optional parts are required, order using the part numbers listed below.

Description	Part no.	Note
Panel mount adapter set	P398050-1	Gasket, Screw 2 pcs.
Display protective cover	P2992136	-



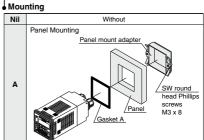

Specifications

Model		IC1□	IC3□	IC5□	IC9□
Pressure range		0.1 MPa	0.5 MPa	0.9 MPa	-0.1 MPa
Proof pressure		500 kPa	1.5 l	MРа	500 kPa
Fluid		Air/Non-corrosive gas			
Dimensions		48 x 48 x 100.5			
Power supply		12 to 24 VDC (15 W or more), Ripple (p-p) 1% or less			1
		①No	of inputs: Up to 10 bit input	ut from sequencer (parallel) Note 5)
		Inp	ut method: No-voltage con	tact or NPN open collector	input
Input		Minimum pulse width: 50 msec			
		②Input method: 4 point input with keys			
		(Interval time can be set by programming.)			
Power supply	output	12 V	DC (Max. 300 mA) with acc	curacy of 12 to 14.4 VDC N	lote 2)
rower suppry	output	24	VDC (Max. 300 mA) with a	accuracy of 22.0 to 26.8 VE	OC
Command ou	tout	①0 to 10 Vc (C	Output resistance: $6.5~\mathrm{k}\Omega$ or	more with accuracy of 0.5	5%F.S. or less)
Command ou	tput	②4 to 20 mA D	C (Output resistance: 800	Ω or less with accuracy of	0.5%F.S. or less)
			Output: 4 points		
			Output type: NPN, PNP op	en collector output	
Switch output			Withstand voltage: Max. 30	V	
Switch output	•		Current: Max. 100 mA		
		Internal voltage drop: 1 V or less			
			Switching between N.O. ar	nd N.C. modes is possible.	
Switch respon	nse	5 to 640 ms			
		Power indication: 3 1/2-digit LED indicator (red)			
Display		Output power supply voltage and current signal indication: 1-digit LED indicator (red)			
		LED lights for RUN, CH, SW (red and green)			
Display accuracy Note 1)			±0.5%F.S. ±1	dig (at 25°C)	
Display sampling rate			Approx. 4	4 times/s	
	characteristics	±0.12%F.S./°C			
Error indication	on	Displayed on pressure indication LED			
	Operating temperature range		0 to !	50°C	
	Storage temperature range	−20 to 60°C			
Resistance	Operating humidity range	0 to 85%R.H.			
	Vibration resistance	10 to 55 Hz 1.5 mm amplitude X, Y, Z directions for 2 hrs. each			. each
	Impact resistance	100 m/s ² (approx. 10 G) X, Y, Z direction			
	Water resistance	only display drik that cover to equivalent to it out the equivalent in the warrant			without cover.
Sensor type		Built-in sensor type, External sensor type Note 3)			
Set value retention 10 years when deenergized (EEPROM)					
Port size		M5 female (built-in sensor type)			
Material		Enclosure: POM			
		Display: PC			
		Gasket: NBR			
		Panel mount adapter: POM			
		Display protective cover: PC			
Weight			Approx. 330 g (Bu	* * *	
-		Approx. 345 g (External sensor type)			

Note 1) The display accuracy is the accuracy of the LED indication when the sensor port of the built-in sensor type is pressurized.

Note 2) The external sensor type has the same output power supply voltage specifications.

Note 3) The sensor for the external sensor type is not attached and must be ordered separately.

Any pressure sensor that transmits analog output signals can be connected.

Recommended sensor: PSE530 series (For more information, please refer to the Web Catalog.)

Note 4) Button operation is required when turning the power on again. However, the made-to-order specification (-X2) automatically returns to the pre-shutdown state when power is switched on again.


Note 5) For the ITV1000 to 3000 series 10-bit digital input type (CE/UKCA compliant), direct 10-bit input (parallel) through a sequencer is possible without going through an IC controller.

IC Series

Functions


■ 4 point preset output

- · Four points (CH1 to CH4) of pressure and switch output ranges can be set with the front panel keys.
- · Up to 20 steps of programming is possible.
- · Interval time (1 to 999 sec) can be set by programming.
- · The set pressures can be arranged in a random order.

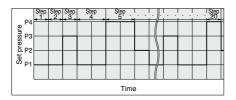


■ 10 bit parallel input

- · Up to 10 bits of parallel input is possible from PLC.
- · Pressure can be set with 210 = 1024 steps.

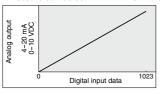

■ Pressure switch function (4 point)

Switch output is enabled by setting the upper and lower limits.

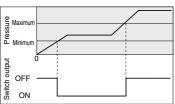

Power supply voltage and output signal switch function

- Output power supply voltage and output signal to the electro-pneumatic regulator can be selected with the front panel keys.
- \cdot No need of power supply for the electro-pneumatic regulator.
- · Stable power supply is possible.

	Power supply voltage	Output signal
1	12 VDC	4 to 20 mA DC
2	12 VDC	0 to 10 VDC
3	24 VDC	4 to 20 mA DC
4	24 VDC	0 to 10 VDC

Set pressure correction function (only for 4 point preset input)

Either automatic or manual adjustment is possible in pressure adjustment mode.

<Automatic adjustment mode>

The controller automatically calculates the deviation and converts the correction value into the output signal. The deviation converges within the range of $\pm 0.5\%$ F.S.

Note) If the set pressure is 250 kPa and the output pressure on the pressure sensor is 245 kPa, the deviation is 250 – 245 = 5 kPa. In order to correct the deviation, the controller increases the output signal until the pressure on the pressure sensor converges at 250 kPa.

<Manual adjustment mode>

The deviation is corrected manually (with keys).

Zero span correction function

Deviation of the zero span point of the sensor can be corrected.

■ Keypad lock function

To prevent erroneous operation, operation on the key can be disabled. Keys which cannot be locked:



■ Reset function

The data is reset to the initial condition at the time of shipment.

Anti-chattering function

Large bore cylinders and ejectors consume a large volume of air in operation and occasionally experience temporary drops in supply pressure. This function prevents detection of such momentary supply pressure drops. It regards them as abnormalities and changes the response time settings. Possible response time settings: 5 ms, 20 ms, 160 ms, 640 ms


<Principle>

The controller equalizes the pressures measured during the specified response time. It then compares the equalized pressure and the set pressure to output switch signals accordingly.


■ Error display


Error name		Error indication	Description
	SW1	Erl	
Overcurrent error	SW2	ErZ	Excess current is running through
	SW3	Er3	switch.
	SW4	Ery	
Switch range error		ErS	Lower limit of switch output exceeds upper limit.
Pressurization error			Pressure exceeding upper limit of set pressure is applied.

Descriptions

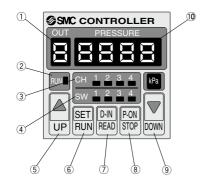

No.	Description
1	OUT display Displays output specification to electro-pneumatic regulator.
2	RUN display Displays control status.
3	CH channel (display) (for 4 point input) Of CH1 to CH4 for pressure selection, channel with output ON lights up.
4	SW (switch) output display Displays output type and output status of SW1 to 4.
(5)	UP button Used to change mode and set value.
6	SET/RUN button Used to confirm mode and set value, or to change to control ON state.
7	Used to select mode and turn on or off power supply to electro-pneumatic regulator.
8	P-ON/STOP button Used to turn on or off main power supply, escape from mode, or change to stand-by state.
9	DOWN button Used to change mode and set value.
10	Pressure display Displays measured value, settings, and error code.

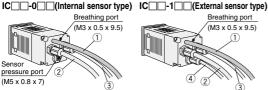


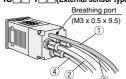

)	No.	Description	Note	
	1	Power supply, 10 bit input cable	13 wire, O.D. 6.8 mm, 1 m length	
	2	Cable for 4 point switch output	5 wire, O.D. 6 mm, 1 m length	
	3	Pneumatic regulator connection cable	3 wire O D 3.4 mm 1 m length	
	4	Cable for external sensor		


Note 1) Keep the bending radius of the cable greater than 50 mm. Note 2) Since the electro-pneumatic regulator connection cable 3 and the cable for external sensor (4) are identical in shape, take precautions against erroneous connection.

Internal Circuit and Connection

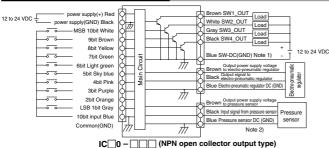

For the setting procedure and detailed cable connection specifications, please refer to the operation manual.

Note 1) If the power supply for loads and main power supply are provided by a common source, the power supply (GND) can be used for SW-DC (GND). Note 2) Connection to the pressure sensor is required only when using the external sensor type.

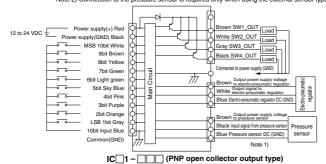


Note 1) Connection to the pressure sensor is required only when using the external sensor type.



IC Series

Dimensions

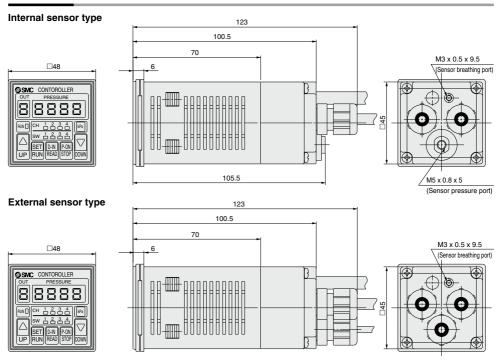

Option

