

Hydraulic Cylinder

CHN Series

7 MPa
 ø20, ø25, ø32, ø40

How to Order

CHN **L** **25** - **100** - **M9BW** **□** - **C**

Mounting type

B	Basic type
L	Axial foot type
F	Rod flange type
G	Head flange type
C	Single clevis type

Bore size

20	20 mm
25	25 mm
32	32 mm
40	40 mm

Auto switch mounting bracket^(Note)

Note) This symbol is indicated when the D-A9□ or M9□ type auto switch is specified.
 This mounting bracket does not apply to other auto switches (D-C7□ and H7□, etc.)
 Applicable to ø20 only.

Number of auto switches

Nil	2 pcs.
S	1 pc.
n	*n* pcs.

Auto switch type

Nil	Without auto switch (built-in magnet)
------------	---------------------------------------

* Select applicable auto switches from the table below.

Cylinder stroke (mm)

Refer to the standard stroke table on page 298.

Applicable Auto Switches/Refer to pages 431 to 490 for further details on each auto switch.

Type	Special function	Electrical entry	Indicator light	Wiring (output)	Load voltage		Auto switch model		Lead wire length (m)					Pre-wired connector	Applicable load			
					DC	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	None (N)					
Solid state auto switch	—	Grommet	No	3-wire (NPN)	5 V, 12 V	—	M9NV	M9N	●	—	●	○	—	○	IC circuit	Relay PLC		
				3-wire (PNP)			M9PV	M9P	●	—	●	○	—	○				
		Connector	Yes	2-wire	12 V	M9BV	M9B	●	—	●	○	—	○	—				
				Terminal conduit	2-wire	5 V, 12 V	—	H7C	●	—	●	●	—	○	—			
	Diagnostic indication (2-color indicator)	Grommet	Yes	No	3-wire (NPN)	24 V	—	—	G39	—	—	—	—	—	—		IC circuit	
					3-wire (PNP)			—	K39	—	—	—	—	—	—		—	
					2-wire			5 V, 12 V	M9NWV	M9NW	●	●	●	○	—		○	—
					2-wire			12 V	M9PWV	M9PW	●	●	●	○	—		○	IC circuit
					3-wire (NPN)			5 V, 12 V	M9B WV	M9B W	●	●	●	○	—		○	—
					3-wire (PNP)			12 V	M9NAV ^{*1}	M9NA ^{*1}	○	○	●	○	—		○	IC circuit
Water resistant (2-color indicator)	Grommet	Yes	No	3-wire (PNP)	5 V, 12 V	—	M9PAV ^{*1}	M9PA ^{*1}	○	○	●	○	—	○	—			
				2-wire			12 V	M9BAV ^{*1}	M9BA ^{*1}	○	○	●	○	—	○	—		
With diagnostic output (2-color indicator)	Grommet	Yes	No	4-wire (NPN)	5 V, 12 V	—	—	H7NF	●	—	●	○	—	○	IC circuit			
				3-wire (NPN equiv.)			5 V	A96V	A96	●	●	●	○	—	○	IC circuit		
Reed auto switch	—	Grommet	No	2-wire	24 V	12 V	—	A96V	A96	●	●	●	○	—	○	IC circuit	Relay PLC	
							100 V	A93V ^{*2}	A93	●	●	●	○	—	○			
							100 V or less	A90V	A90	●	—	●	—	—	—			
							100 V, 200 V	—	B54	●	—	●	●	—	—			
							200 V or less	—	B64	●	—	●	—	—	—			
		Connector	Yes	No	2-wire	24 V	12 V	24 V or less	—	C73C	●	—	●	●	—	○		IC circuit
									—	C80C	●	—	●	●	—	○		
									—	A33	—	—	—	—	●	—		
									100 V,	A34	—	—	—	—	●	—		
									200 V	A44	—	—	—	—	●	—		
Terminal conduit	Yes	No	2-wire	24 V	12 V	—	—	B59W	●	—	●	—	—	○	—			
							—	B59W	●	—	●	—	—	○				
DIN terminal	Yes	No	2-wire	24 V	12 V	—	—	A44	—	—	—	—	—	○	—			
							—	B59W	●	—	●	—	—	○				
Diagnostic indication (2-color indicator)	Grommet	Yes	No	2-wire	24 V	12 V	—	B59W	●	—	●	—	—	○	—			
							—	B59W	●	—	●	—	—	○				

*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. --(Applicable to ø20 only.)

Consult with SMC regarding water resistant types with the above model numbers.

*2 1 m type lead wire is only applicable to D-A93.

* Lead wire length symbols: 0.5 m Nil (Example) M9NW
 1 m M (Example) M9NWM
 3 m L (Example) M9NWL
 5 m Z (Example) M9NWZ
 None N (Example) H7CN

* Solid state auto switches marked "○" are produced upon receipt of order.

* You do not need to specify "N" (i.e., without lead wire) for D-A3□, D-A44, D-G39, and D-K39. This is the only standard specification automatically available for these models.

* D-A9□V, M9□V, M9□WV, and M9□A(V) models cannot be mounted on ø25 to ø40.

* Since there are applicable auto switches other than listed, refer to page 310 for details.

* For details about auto switches with pre-wired connector, refer to pages 474 and 475.

* D-A9□, M9□, and M9□W type auto switches are shipped with the hydraulic cylinder (but not assembled). (However, they are auto switch mounting brackets are shipped with the mounting brackets mounted already.)

- CHQ
- CHK□
- CHN
- CHM
- CHS□
- CH2□
- CHA
- Related Products
- D-□



Specifications

Bore size (mm)	20	25	32	40
Action	Double acting/Single rod			
Fluid	Hydraulic fluid			
Nominal pressure	7 MPa			
Proof pressure	10.5 MPa			
Maximum allowable pressure	9 MPa			
Minimum operating pressure	0.3 MPa			
Ambient and fluid temperature	Without auto switch: -10° to 80°C			
	With auto switch: -10° to 60°C			
Piston speed	8 to 300 mm/s			
Cushion	Cushion seal			
Stroke length tolerance	to 250 mm $^{+1.0}_0$			
	251 to 800 mm $^{+1.4}_0$			
Mounting type	Basic type, Axial foot type Head flange type, Rod flange type Single clevis type			

Note) Refer to page 214 for definitions of terms related to pressure.

Accessories

Mounting type		Basic	Axial foot	Head flange	Rod flange	Single clevis
Standard	Mounting nut	● (2 pcs.)	● (2 pcs.)	● (1 pc.)	● (1 pc.)	—
	Rod end nut	●	●	●	●	●

Option

I-type single knuckle joint Y-type double knuckle joint Bracket for clevis type Knuckle pin Bracket pin	Refer to page 307
---	-------------------

Hydraulic Fluid Compatibility

Hydraulic fluid	Compatibility
Standard mineral hydraulic fluid	Compatible
W/O hydraulic fluids	Compatible
O/W hydraulic fluids	Compatible
Water/Glycol hydraulic fluids	*
Phosphate hydraulic fluids	Not compatible

* Consult with SMC.

Standard Strokes: Refer to page 309 for minimum strokes for auto switch mounting.

Bore size (mm)	Standard strokes (mm)	Long stroke
20	25 to 300	800
25	25 to 400	
32	25 to 500	
40		

* Standard strokes above have a minimal delivery time.
Consult with SMC for the manufacture of strokes other than the above.

Mounting Brackets: Part Nos.

Bore size (mm)	20	25	32	40
Axial foot *	CHN-L020	CHN-L025	CHN-L032	CHN-L040
Flange	CHN-F020	CHN-F025	CHN-F032	CHN-F040

* When ordering the axial foot type, order 2 pieces for each cylinder.

Theoretical Output

Bore size (mm)	Rod size (mm)	Operating direction	Piston area (mm ²)	Operating pressure (MPa)			
				1	3	5	7
20	10	OUT	314	314	942	1570	2198
		IN	235	235	705	1175	1645
25	12	OUT	490	490	1470	2450	3430
		IN	377	377	1131	1885	2639
32	16	OUT	804	804	2412	4020	5628
		IN	603	603	1809	3015	4221
40	18	OUT	1256	1256	3768	6280	8792
		IN	1002	1002	3006	5010	7014

Theoretical output (N) = Pressure (MPa) x Piston area (mm²)

Weight

		Unit: kg			
Bore size (mm)		20	25	32	40
Basic Weight	Basic type	0.27	0.37	0.53	1.05
	Axial foot type	0.51	0.63	0.91	1.59
	Flange type	0.36	0.54	0.72	1.26
	Clevis type	0.25	0.45	0.67	1.00
Additional weight per 50 mm		0.12	0.13	0.18	0.23

- Calculation method (Example) **CHNL20-100** (Foot type, ø20, 100 mm stroke)
- Basic weight 0.51 kg
- Additional weight ... 0.12/50 mm
- Cylinder stroke 100 mm
- 0.51 + 0.12/50 x 100 = 0.75 kg

Specific Product Precautions

Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 214 to 221 for Hydraulic Cylinder and Auto Switch Precautions.

Caution

When operating a cylinder for the first time, make sure to release the air at low pressure. When the air release is complete, operate the cylinder at reduced pressure, gradually increasing it to the normal operating pressure. However, the piston speed at this time should be adjusted to the minimum speed.

Mounting

Caution

1. When mounting with bracket mounting nuts, tighten them using the tightening torques in the table below as a guide.

Bore size (mm)	Mounting nut thread	Mounting nut width across flats (mm)	Tightening torque (N·m)
20	M22 x 1.5	26	45
25	M24 x 1.5	32	60
32	M30 x 1.5	38	85
40	M33 x 1.5	41	110

2. When mounted with one side attached and one side unattached (basic type and flange type) and operating at high speed, bending moment acts on the cylinder due to oscillation at the stroke end, which may cause cylinder damage. In this case, install brackets to suppress the oscillation of the cylinder body, or reduce the piston speed enough so that the cylinder body does not oscillate at the stroke end.

CHQ

CHK

CHN

CHM

CHS


CHZ

CHA

Related Products

D-

Construction

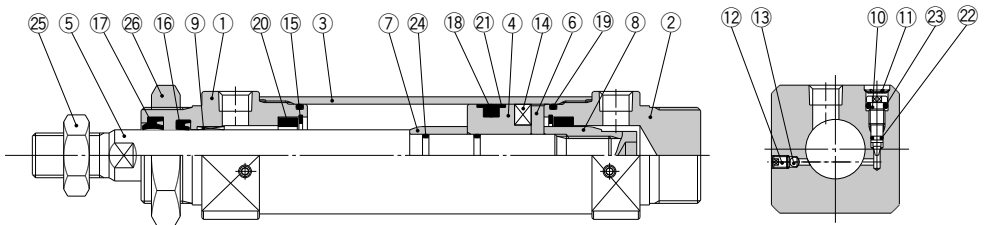

Parts List

No.	Description	Material	Note
1	Rod cover	Aluminum alloy	Black anodized
2	Head cover	Aluminum alloy	Black anodized
3	Cylinder tube	Stainless steel	
4	Piston	Stainless steel	
5	Piston rod	ø20, 25: Stainless steel ø32, 40: Carbon steel	Hard chromium electro plating
6	Magnet plate	Stainless steel	
7	Cushion ring A	Carbon steel	
8	Cushion ring B	Carbon steel	
9	Bushing	Lead bronze	
10	Cushion valve	Carbon steel	
11	Retaining ring	Spring steel	
12	Air release valve	Alloy steel	
13	Check ball	Bearing steel	

Replacement Parts: Seal Kit


Bore size (mm)	Seal kit no.	Content
20	CHN20-PS	Nos. 16 to 23 from the chart
25	CHN25-PS	
32	CHN32-PS	
40	CHN40-PS	

Parts List

No.	Description	Material	Note
14	Magnet	—	
15	Retaining ring	Spring steel	
16	Rod seal	NBR	
17	Scraper	NBR	
18	Piston seal	NBR	
19	Tube gasket	NBR	
20	Cushion seal	—	
21	Back-up ring	Resin	
22	Cushion valve seal A	NBR	
23	Cushion valve seal B	NBR	
24	Piston gasket	NBR	
25	Rod end nut	Carbon steel	
26	Mounting nut	Carbon steel	

Dimensions

Basic type: CHNB

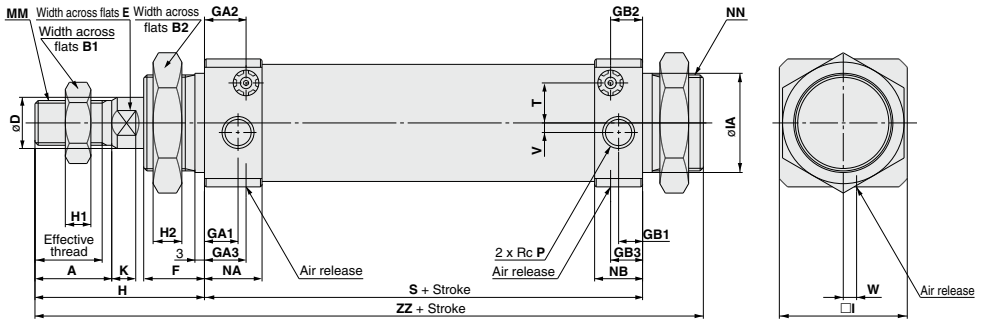

- CHQ**
- CHK
- CHN**
- CHM
- CHS
- CH2
- CHA**
- Related Products
- D-

(mm)

Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B1	B2	D	E	F	GA1	GA2	GA3	GB1	GB2	GB3	H	H1	H2	I
20	25 to 300	15.5	18	13	26	10	8	16	10	12	12	8	10	10	41	5	8	31
25	25 to 400	19.5	22	17	32	12	10	16	10	12	12	8	10	10	46	6	8	34
32	25 to 500	21	24	22	38	16	14	19	11	13	13	8	10	10	53	8	9	40
40	25 to 500	21	24	24	41	18	16	21	12	17	17	11	16	16	54	10	11	48


(mm)

Bore size (mm)	IA	K	MM	NA	NB	NN	P	S	T	V	W	ZZ
20	23f8 ^{-0.020} _{-0.053}	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
25	25f8 ^{-0.020} _{-0.053}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
32	31f8 ^{-0.025} _{-0.064}	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
40	34f8 ^{-0.025} _{-0.064}	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

CHN Series

Dimensions


Axial foot type: CHNL

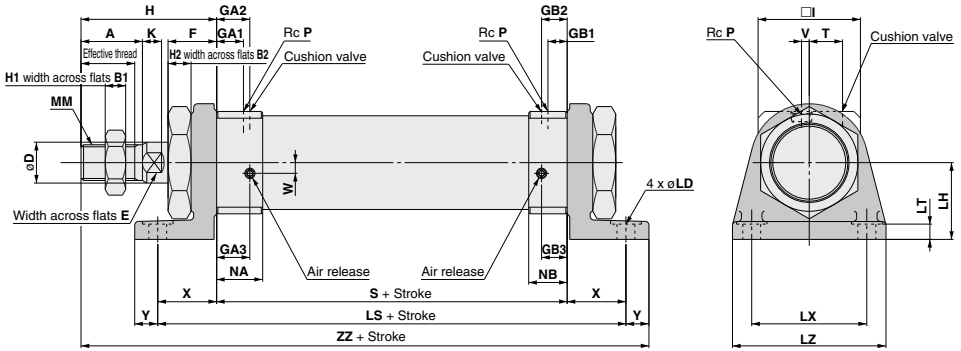

Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B1	B2	D	E	F	GA1	GA2	GA3	GB1	GB2	GB3	H	H1	H2	I	K
20	25 to 300	15.5	18	13	26	10	8	16	10	12	12	8	10	10	41	5	8	31	5
25	25 to 400	19.5	22	17	32	12	10	16	10	12	12	8	10	10	46	6	8	34	5.5
32	25 to 500	21	24	22	38	16	14	19	11	13	13	8	10	10	53	8	9	40	7.5
40	25 to 500	21	24	24	41	18	16	21	12	17	17	11	16	16	54	10	11	48	7.5

Bore size (mm)	LD	LH	LS	LT	LX	LZ	MM	NA	NB	P	S	T	V	W	X	Y	ZZ
20	7	25	121	5.5	40	55	M8 x 1.25	17	15	1/8	81	9.8	4.5	6.5	20	9	151
25	7	28	121	5.5	40	55	M10 x 1.25	17	15	1/8	81	11	3.5	5.5	20	9	156
32	7	30	133	6	45	60	M14 x 1.5	18	15	1/8	87	13	3	4	23	9	172
40	9	35	158	6	55	75	M16 x 1.5	22	21	1/4	108	16	5	0	25	11	198

Rod flange type: **CHNF**

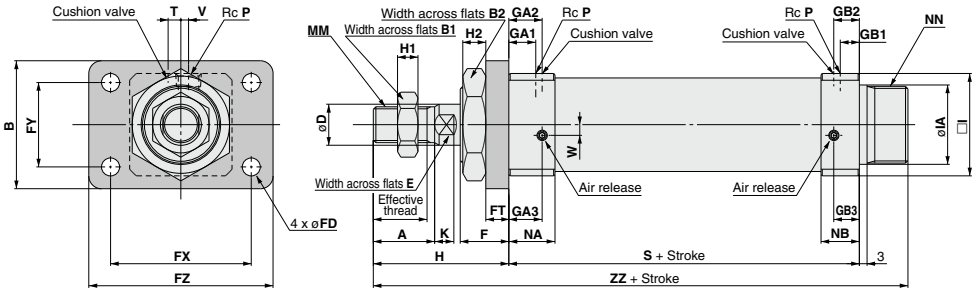

- CHK**
- CHK**
- CHN**
- CHN**
- CHM**
- CHS**
- CH2**
- CHA**
- Related Products
- D-**


Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B	B1	B2	D	E	F	FD	FT	FX	FY	FZ	GA1	GA2	GA3	GB1	GB2
20	25 to 300	15.5	18	38	13	26	10	8	16	7	6	51	21	68	10	12	12	8	10
25	25 to 400	19.5	22	44	17	32	12	10	16	7	9	53	27	70	10	12	12	8	10
32	25 to 500	21	24	50	22	38	16	14	19	7	9	55	33	72	11	13	13	8	10
40	25 to 500	21	24	60	24	41	18	16	21	9	9	66	36	84	12	17	17	11	16

Bore size (mm)	GB3	H	H1	H2	I	IA	K	MM	NA	NB	NN	P	S	T	V	W	ZZ
20	10	41	5	8	31	23f8 ^{-0.020} _{-0.053}	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
25	10	46	6	8	34	25f8 ^{-0.020} _{-0.053}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
32	10	53	8	9	40	31f8 ^{-0.025} _{-0.064}	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
40	16	54	10	11	48	34f8 ^{-0.025} _{-0.064}	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

CHN Series

Dimensions


Head flange type: CHNG

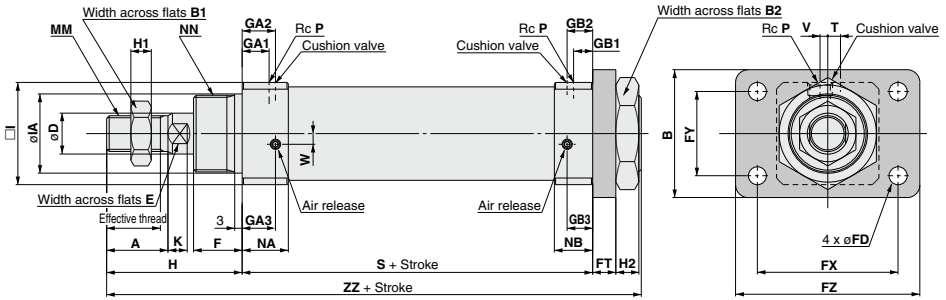

Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B	B1	B2	D	E	F	FD	FT	FX	FY	FZ	GA1	GA2	GA3	GB1	GB2
20	25 to 300	15.5	18	38	13	26	10	8	16	7	6	51	21	68	10	12	12	8	10
25	25 to 400	19.5	22	44	17	32	12	10	16	7	9	53	27	70	10	12	12	8	10
32	25 to 500	21	24	50	22	38	16	14	19	7	9	55	33	72	11	13	13	8	10
40	25 to 500	21	24	60	24	41	18	16	21	9	9	66	36	84	12	17	17	11	16

Bore size (mm)	GB3	H	H1	H2	I	IA	K	MM	NA	NB	NN	P	S	T	V	W	ZZ
20	10	41	5	8	31	23 ^{0.020} _{0.033}	5	M8 x 1.25	17	15	M22 x 1.5	1/8	81	9.8	4.5	6.5	138
25	10	46	6	8	34	25 ^{0.020} _{0.033}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	81	11	3.5	5.5	143
32	10	53	8	9	40	31 ^{0.025} _{0.064}	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	87	13	3	4	159
40	16	54	10	11	48	34 ^{0.025} _{0.064}	7.5	M16 x 1.5	22	21	M33 x 2	1/4	108	16	5	0	183

Single clevis type: **CHNC**

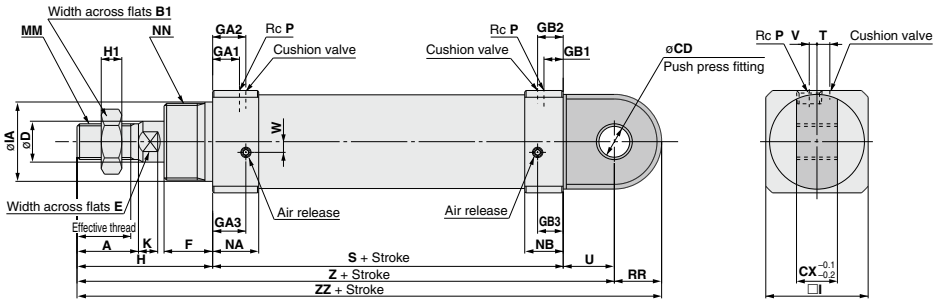


- CHQ**
- CHK
- CHN**
- CHM
- CHS
- CHZ
- CHA**
- Related Products
- D-

Bore size (mm)	Stroke range (mm)	Effective thread length (mm)	A	B1	CD	CX	D	E	F	GA1	GA2	GA3	GB1	GB2	GB3	H	H1	I
20	25 to 300	15.5	18	13	10 ^{+0.109} ₀	16	10	8	16	10	12	12	8	10	10	41	5	31
25	25 to 400	19.5	22	17	10 ^{+0.109} ₀	16	12	10	16	10	12	12	8	10	10	46	6	34
32	25 to 500	21	24	22	12 ^{+0.109} ₀	16	16	14	19	11	13	13	8	10	10	53	8	40
40	25 to 500	21	24	24	16 ^{+0.034} _{+0.015}	24	18	16	21	12	17	17	11	16	16	54	10	48

Bore size (mm)	IA	K	MM	NA	NB	NN	P	RR	S	T	U	V	W	Z	ZZ
20	2318 ^{-0.020} _{-0.053}	5	M8 x 1.25	17	15	M22 x 1.5	1/8	13.5	81	9.8	14	4.5	6.5	136	149.5
25	2518 ^{-0.020} _{-0.053}	5.5	M10 x 1.25	17	15	M24 x 1.5	1/8	14.5	81	11	15	3.5	5.5	142	156.5
32	3118 ^{-0.025} _{-0.064}	7.5	M14 x 1.5	18	15	M30 x 1.5	1/8	18.5	87	13	20	3	4	160	178.5
40	3418 ^{-0.025} _{-0.064}	7.5	M16 x 1.5	22	21	M33 x 2	1/4	22.5	108	16	20	5	0	182	204.5

Accessories (Standard)


Rod end nut

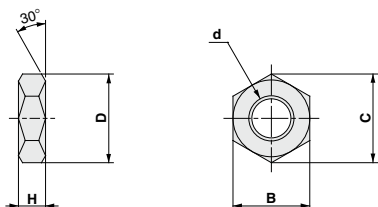

Material: Carbon steel

Part no.	Applicable bore size (mm)	d	H	B	C	D
NT-02	20	M8 x 1.25	5	13	15.0	12.5
NT-03	25	M10 x 1.25	6	17	19.6	16.5
NT-04	32	M14 x 1.5	8	22	25.4	21.0
AC-NI-50	40	M16 x 1.5	10	24	27.7	23

Mounting nut

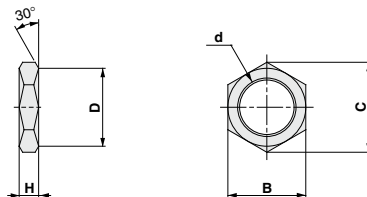


Material: Carbon steel

Part no.	Applicable bore size (mm)	d	H	B	C	D
SO-02	20	M22 x 1.5	8	26	30	26
SO-03	25	M24 x 1.5	8	32	36.9	32
SO-04	32	M30 x 1.5	9	38	43.9	38
SO-05	40	M33 x 2.0	11	41	47.3	41


Accessory Brackets (Optional)

I-type single knuckle joint

ø20: I-02
ø25: I-03

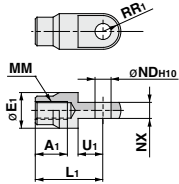

ø32: I-04
ø40: IHN-04

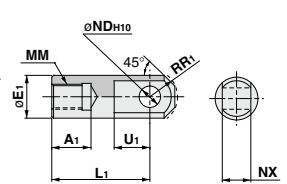


Material: Rolled steel plate Material: Rolled steel plate


Part no.	Applicable bore size (mm)	A1	E1	L1	MM	R1	U1	NDH10	
								Size	Tolerance
I-020B	20	16	20	36	M8 x 1.25	10	14	9 ^{+0.058} ₀	9 ^{-0.1} _{-0.2}
I-032B	25	18	20	38	M10 x 1.25	10	14	9 ^{+0.058} ₀	9 ^{-0.1} _{-0.2}
I-04A	32	22	24	55	M14 x 1.5	15.5	20	12 ^{+0.070} ₀	16 ^{-0.1} _{-0.3}
IHN-04	40	22	24	55	M16 x 1.5	15.5	20	15 ^{+0.070} ₀	16 ^{-0.1} _{-0.3}

Y-type double knuckle joint

ø20: Y-020B
ø25: Y-030B

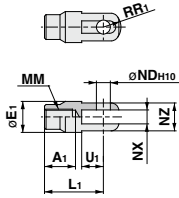

ø32: Y-04D
ø40: YHN-04

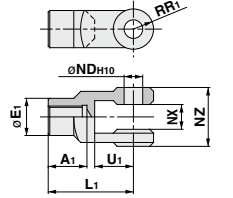


Material: Rolled steel plate Material: Cast iron

Part no.	Applicable bore size (mm)	A1	E1	L1	MM	R1	U1	NDH10	
								Size	Tolerance
Y-020B	20	16	20	36	M8 x 1.25	12	14	9 ^{+0.058} ₀	9 ^{+0.2} _{+0.1}
Y-032B	25	18	20	38	M10 x 1.25	12	14	9 ^{+0.058} ₀	9 ^{+0.2} _{+0.1}
Y-04D	32	22	24	55	M14 x 1.5	13	25	12 ^{+0.070} ₀	16 ^{+0.3} _{+0.1}
YHN-04	40	22	24	55	M16 x 1.5	13	25	15 ^{+0.070} ₀	16 ^{+0.3} _{+0.1}

Part no.	NZ	Note
Y-030B	18	
Y-04D	38	With CDP-3A (with cotter pin and flat washer)
YHN-04	38	With CDPN-4 (with cotter pin)


Knuckle pin

ø20, ø25
Part no.: CDP-1
Material: Carbon steel

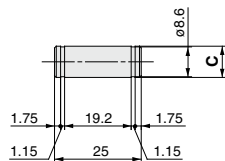

Retaining ring: C type 9 for shaft


ø32 ø40
Part no.: CDP-3A CDPN-4
Material: Carbon steel

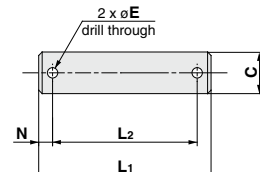

Cotter pin: ø3 x 18 ℓ

Bracket for clevis type

* Order bracket pin separately.

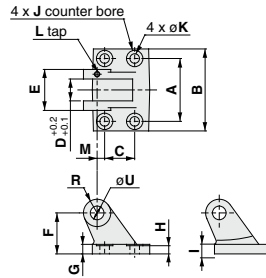


Material: Cast iron

Part no.	Applicable bore size (mm)	A	B	C	D	U (H8)		E	F	G	H	I
						Size	Tolerance					
AD-FI-20	20	46	60	22	16	10	+0.027 0	30	28	6.5	5.5	10
AD-FI-25	25	46	60	22	16	10	+0.027 0	30	30	6.5	5.5	10
AD-FI-32	32	56	80	30	16	12	+0.027 0	36	40	10	9	13
AD-CHN-40	40	64	88	30	24	16	+0.027 0	44	43	10	9	13

Part no.	J	K	L	M	R	Note
AD-FI-25	12	7	M4	5.5	10	M4 set screws (once)
AD-FI-32	12	7	M5	7	12	M5 set screws (once)
AD-CHN-40	16	9	M5	10	12	M5 set screws (once)

Bracket pin

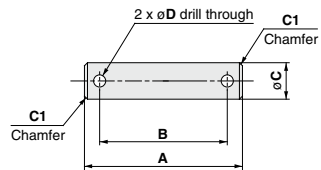

Material: Carbon steel

Part no.	Applicable bore size (mm)	A	B	C (F7)		D	Note
				Size	Tolerance		
AD-EI-20	20	45.5	35.5	10	-0.016 -0.034	3.2	with (2) cotter pins ø3.2 x 15 ℓ
AD-EI-25	25	45.5	35.5	10	-0.016 -0.034	3.2	
AD-EI-32	32	52	42	12	-0.016 -0.034	4	with (2) cotter pins ø4 x 20 ℓ
AE-CHN-40	40	60	50	16	-0.016 -0.034	4	with (2) cotter pins ø3.2 x 20 ℓ


Part no.	Applicable bore size (mm)	C (ø9)	L1	L2	N	E	Note
CDP-3A	32	12	55.5	47.5	4	3	with (2) cotter pins ø3 x 18 ℓ with (2) flat washer, polished round M12
CDPN-4	40	15	49.7	41.7	5	3.2	with (2) cotter pins ø3.2 x 20 ℓ

Auto Switch Mounting

Refer to pages 431 to 490 for detailed auto switch specifications.


Auto Switches: Proper Mounting Positions and Mounting Heights for Stroke End Detection

D-A9□V




A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.

D-A9□




A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.
* Dimensions inside () are for D-M9□AV.

D-M9□V/M9□WV/M9□AV




A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.
* Dimensions inside () are for D-M9□AV.

D-M9□/M9□W/M9□A




A and B are the dimensions from the end of the head cover/rod cover to the end of the auto switch.
* Dimensions inside () are for D-M9□AV.


D-C7□/C80




D-C73C/C80C




D-B5□/B64/B59W




D-A3□/G39/K39




D-H7□/H7□W/H7NF/H7BA




D-H7C



D-G5□/K59/G5□W/K59W/G5BA/G59F/G5NT



D-A44



Auto Switch Proper Mounting Positions

Bore size (mm)	Solid state auto switch								Reed auto switch									
	D-M9□(V) D-M9□W(V) D-M9□A(V)		D-H7□ D-H7□W/H7C D-H7NF/H7BA		D-G5□/K59 D-G5□W/K59W D-G59F/G5BA D-G5NT		D-G39/K39		D-A9□(V)		D-C7□/C80 D-C73C/C80C		D-B5□/B64		D-B59W		D-A3□/A44	
	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B	A	B
20	23	14	18.5	9.5	15	6	13	4	19	10	19.5	10.5	13.5	4.5	16.5	7.5	13	4
25	23.5	13.5	19	9	15.5	5.5	13.5	3.5	19.5	9.5	20	10	14	4	17	7	13.5	3.5
32	25.5	16.5	21	12	17.5	8.5	15.5	6.5	21.5	12.5	22	13	16	7	19	10	15.5	6.5
40	31.5	21.5	27	17	23.5	13.5	21.5	11.5	27.5	17.5	28	18	22	12	25	15	21.5	11.5

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

Auto Switch Mounting Heights

Bore size (mm)	D-M9□(V) D-M9□W(V) D-M9□A(V) D-A9□(V)		D-H7□/H7□W D-H7NF/H7BA D-C7□/C80		D-C73C/C80C		D-G5□/K59 D-G5□W/K59W D-G59F/G5BA D-G5NT/H7C D-B5□/B64 D-B59W		D-G39/K39 D-A3□		D-A44	
	Hs		Hs		Hs		Hs		Hs		Hs	
20	26		25.5		27		27.5		62		72	
25	28		27.5		29		29.5		64		74	
32	31.5		31		32.5		33		67.5		77.5	
40	35.5		35		36.5		37		71.5		81.5	

Minimum Auto Switch Mounting Stroke

Auto switch model	(mm)				
	1 pc.	Number of auto switches mounted		n pcs.	
		2 pcs.			
		Different surfaces	Same surface	Different surfaces	Same surface
D-M9□	5	20	55	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$55 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-M9□W	10	20	55	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$55 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-M9□A	10	25	60	$25 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$60 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-A9□	5	15	50	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$50 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-M9□V	5	20	35	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$35 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-A9□V	5	15	25	$15 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$25 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-M9□WV D-M9□AV	10	20	35	$20 + 35 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$35 + 35 (n-2)$ (n = 2, 3, 4, 5...)
D-H7□/H7□W D-H7NF/H7BA	10	15	60	$15 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$60 + 45 (n-2)$ (n = 2, 3, 4, 5...)
D-C7□ D-C8□	10	15	50	$15 + 45 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$50 + 45 (n-2)$ (n = 2, 3, 4, 5...)
D-H7C D-C73C D-C80C	10	15	65	$15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$65 + 50 (n-2)$ (n = 2, 3, 4, 5...)
D-G5□/K59 D-G5□W/K59W D-G59F/G5BA/G5NT D-B5□/B64	10	15	75	$15 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$75 + 55 (n-2)$ (n = 2, 3, 4, 5...)
D-B59W	15	20	75	$20 + 50 \frac{(n-2)}{2}$ (n = 2, 4, 6...) ^{Note 3)}	$75 + 55 (n-2)$ (n = 2, 3, 4, 5...)
D-G39/K39 D-A3□/A44	10	35	100	$35 + 30 (n-2)$ (n = 2, 3, 4, 5...)	$100 + 100 (n-2)$ (n = 2, 3, 4, 5...)

Note 3) When "n" is an odd number, an even number that is one larger than this odd number is used for the calculation.

Note 1) Auto switch mounting

Auto switch model	Auto switches — 2 pcs.	
	Different surfaces	Same surface
	<p>Correct auto switch mounting position is 3.5 mm from the back face of the switch holder.</p>	<p>Mount auto switches offset (in circumferential direction of cylinder tube) so that auto switch units and lead wires do not run up against each other.</p>
D-M9□ D-M9□W	Less than 20 stroke ^{Note 2)}	Less than 55 stroke ^{Note 2)}
D-M9□A	Less than 25 stroke ^{Note 2)}	Less than 60 stroke ^{Note 2)}
D-A9□	—	Less than 50 stroke ^{Note 2)}

Note 2) Minimum stroke for auto switch mounting in types other than those mentioned in Note 1.

Operating Range

Auto switch model	(mm)			
	Bore size			
	20	25	32	40
D-M9□(V) D-M9□W(V) D-M9□A(V)	4.5	4	4	4.5
D-H7□/H7C D-H7□W D-H7NF/H7BA	4.5	5	4.5	5
D-G5□/K59/G59F D-G5□W/K59W D-G5BA/G5NT	5.5	5	4.5	5

Auto switch model	(mm)			
	Bore size			
	20	25	32	40
D-G39/K39	9	8.5	10	10.5
D-A9□(V)	8	7.5	7	8
D-C7□/C80 D-C73C/C80C	10.5	9.5	8.5	10
D-B5□/B64	13.5	11.5	10	12
D-B59W	13.5	13	11.5	13.5
D-A3□/A44	11.5	10	9	10.5

* Since this is a guideline including hysteresis, not meant to be guaranteed. (Assuming approximately ±30% dispersion.) There may be the case it will vary substantially depending on an ambient environment.



- CHK
- CHK□
- CHN
- CHM
- CHS□
- CH2□
- CHA
- Related Products
- D-□

Auto Switch Mounting Brackets: Part Nos.

Auto switch model	Bore size (mm)			
	ø20	ø25	ø32	ø40
D-A9□(V) D-M9□(V) D-M9□W(V)	Note 1) BMA3-020 (A set of a, b, c, d)	BJ3-1+BHN3-025 (A set of g, h, i, j, k)	BJ3-1+BHN3-032 (A set of g, h, i, j, k)	BJ3-1+BHN3-040 (A set of g, h, i, j, k)
D-M9□A(V) Note 2)	BMA3-020S (A set of b, c, e, f)	—	—	—
D-H7□ D-H7□W D-H7NF D-C7□/C80 D-C73C/C80C	BMA2-020A (A set of c and d)	BHN3-025 (A set of c and d)	BHN3-032 (A set of c and d)	BHN3-040 (A set of c and d)
D-H7BA	BMA2-020AS (A set of c and f)	BHN3-025 (A set of j and k)	BHN3-032 (A set of j and k)	BHN3-040 (A set of j and k)
D-G5□/G5□W D-G59F D-G5BA/G5NT D-B5□/B64 D-B59W	BA-01 (A set of c and f)	BHN2-025 (A set of j and k)	BGS1-032 (A set of j and k)	BH2-040 (A set of j and k)
D-G39/K39 D-A3□/A44	BD1-01M	BD1-02M	BHN1-032	BDS-04M

Note 1) Since the switch bracket (made from nylon) are affected in an environment where alcohol, chloroform, methylamines, hydrochloric acid or sulfuric acid is splashed over, so it cannot be used. Please consult SMC regarding other chemicals.

Note 2) When mounting a D-M9□A(V) type auto switch, if the switch bracket is mounted on the indicator light, it may damage the auto switch. Therefore, be sure to avoid mounting the switch bracket on the indicator light.

Note 3) D-A9□V, M9□V, M9□WV, and M9□A(V) models cannot be mounted on ø25 to ø40.

[Stainless steel mounting screw kits]

The following stainless steel mounting screw kits are available for use depending on the operating environment. (Switch mounting bands are not included and should be ordered separately.)

BBA3: D-G5, K5, B5, B6

BBA4: D-C7, C8, H7

Note) Refer to the table below for details on BBA3, BBA4.

The above stainless steel screws are used when a cylinder is shipped with the D-H7BA or G5BA auto switches.

When only an auto switch is shipped independently, the BBA3 or BBA4 is attached.

Stainless steel mounting screw kit details

Part no.	Contents		Applicable auto switch mounting bracket part nos.	Applicable auto switches
	Description	pcs.		
BBA3	Auto switch mounting screw set	1	BA-01, BA-02, BA-32, BA-04, BA-05, BA-06, BA-08, BA-10	D-B5, B6 D-G5, K5
			BA2-020, BA2-025, BA2-032, BA2-040	
			BA5-050, BHN2-025, BSG1-032	
			BH2-040, BH2-050, BH2-080, BH2-100	
			BAF-32, BAF-04, BAF-05, BAF-06, BAF-08, BAF-10	
BBA4	Auto switch mounting screw set	1	BJ2-006, BJ2-010, BJ2-016	D-C7, C8 D-H7
			BM2-020A, BM2-025A, BM2-032A, BM2-040A	
			BMA2-020A, BMA2-025A, BMA2-032A, BMA2-040A, BMA2-050A, BMA2-063A	
			BHN3-025, BHN3-032, BHN3-040	

Besides the models listed in "How to Order," the following auto switches are applicable. Refer to pages 431 to 490 for detailed auto switch specifications.

Auto switch type	Part no.	Electrical entry	Features
Solid state	D-H7A1, H7A2, H7B	Grommet (in-line)	—
	D-G59, G5P, K59		Diagnostic indication (2-color indicator)
	D-H7NW, H7PW, H7BW		Water resistant (2-color indicator)
	D-G59W, G5PW, K59W		With timer
	D-G5BA, H7BA		With diagnostic output (2-color indicator)
	D-G5NT		—
Reed	D-C73, C76, B53	Grommet (in-line)	—
	D-C80		Without indicator light

* Solid state auto switches are also available with pre-wired connector. Refer to pages 474 and 475 for details.

* Normally closed (N.C. = b contact), solid state auto switches (D-F9G, F9H) are also available. For details, refer to page 443.

How to Mount and Move the Auto Switch

⚠ Caution

1. Tighten the screw under the specified torque when mounting auto switch.
2. Set the auto switch mounting band perpendicularly to cylinder tube.



<Applicable auto switch>

Solid state.....D-M9N, M9P, M9B, M9NV, M9PV, M9BV
 D-M9NW, M9PW, M9BW, M9NWV, M9PWV, M9BWV
 D-M9NA, M9PA, M9BA, M9NAV, M9PAV, M9BAV
Reed.....D-A90, A93, A96, A90V, A93V, A96V

How to Mount and Move the Auto Switch

Mounting the Auto Switch (When the bore size is 20 mm)

1. Wrap the auto switch mounting band around the cylinder where the auto switch will be mounted without bending the reinforcing plates.
2. Connect the switch holder and switch bracket, and place them between the two ends of the auto switch mounting band (1).
3. Hook the bent part of the auto switch mounting band reinforcing plates onto the upper surface of the switch bracket. Bend the base of the auto switch mounting band reinforcing plates until the through holes of the switch bracket, the through holes of the auto switch mounting band, and the holes of the M3 female thread are aligned. Adjust the switch bracket so that both ends of the auto switch mounting band are inserted into the inner walls on both side surfaces of the switch bracket.
 For the D-M9CA (V) type auto switch, do not install the switch bracket on the indicator light.
4. Pass the auto switch mounting screw (M3) supplied with the auto switch mounting band from the through-hole side of the auto switch mounting band and engage it with the M3 female thread of the auto switch mounting band through the through-hole in the switch bracket.
5. Tighten the auto switch mounting screw with the specified tightening torque (0.6 to 0.7 N·m).
6. Insert the auto switch into the auto switch mounting groove of the switch holder (2).
7. After checking the detection position, tighten the set screw (M2.5) supplied with the auto switch to secure the auto switch.

Mounting the Auto Switch (When the bore size is 25 mm or more)

1. Attach the switch bracket to the switch holder. Align the convex part of the switch bracket with the concave part of the switch holder.
2. Mount the switch holder (1) between the auto switch mounting band (2) reinforcing plates.
3. Mount the switch holder (1) between the auto switch mounting band (2) reinforcing plates.
4. Insert the auto switch mounting screw through the holes in both reinforcing plates, and temporarily tighten the screw.
5. Remove the set screw from the auto switch.
6. Fit the switch spacer into the auto switch.
7. Insert the auto switch (6) into the switch holder from the back, and set it in place.
8. Tighten the auto switch mounting screw with the specified tightening torque (0.8 to 1.0 N·m).

Removing the Auto Switch (When the bore size is 25 mm or more)

1. Loosen the auto switch mounting screw, and remove it.
2. Remove the switch bracket from the switch holder.
3. Open the top of the switch holder, and remove the auto switch and spacer together from above.
4. Remove the switch spacer from the auto switch.


Tightening torque for the set screw (M2.5) supplied with the auto switch (N·m)

Auto switch model	Tightening torque
D-M9□(V)	0.05 to 0.15
D-M9□W(V)	
D-M9□A(V)	
D-A9□(V)	0.1 to 0.2

When tightening the set screw supplied with the auto switch, use a watchmaker's screw driver with a handle diameter of 5 to 6 mm.

Note) When removing the screw connection part with the auto switch mounting screw after the auto switch mounting band has been assembled, be careful not to drop the switch bracket, switch holder, auto switch mounting screw, or auto switch mounting band.

When the bore size is 20 mm

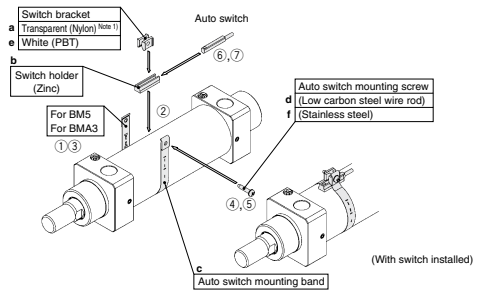

* Band (c) is mounted so that the projected part is on the internal side (contact side with the tube).

When the bore size is 25 mm or more


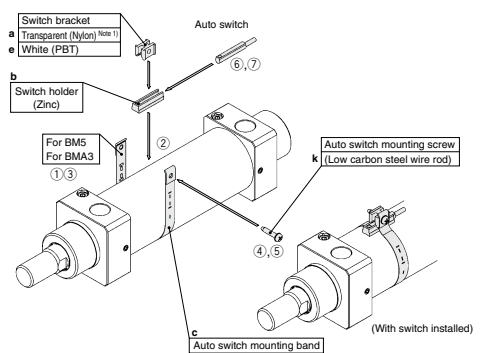


Figure 1. Switch insert angle

Adjustment the Auto Switch Position

1. To make the fine adjustment, loosen the set screw (M2.5) supplied with the auto switch and slide the auto switch inside the auto switch mounting groove to adjust the position.
2. To move the auto switch setting position largely, loosen the screw (M3) that secures the auto switch mounting band and slide the auto switch together with the switch holder on the cylinder tube to adjust the position.

CHQ

CHK

CHN

CHM

CHS

CHZ

CHA


Related Products

D-□


How to Mount and Move the Auto Switch

⚠ Caution

1. Tighten the screw under the specified torque when mounting auto switch.
2. Set the auto switch mounting band perpendicularly to cylinder tube.




Mounting correctly



Mounting incorrectly

<Applicable auto switch>


Solid state D-G59, D-G5P, D-K59, D-G5BA
 D-G59W, D-G5PW, D-K59W
 D-G59F, D-G5NT, D-G5NB
 Reed D-B53, D-B54, D-B64, D-B59W

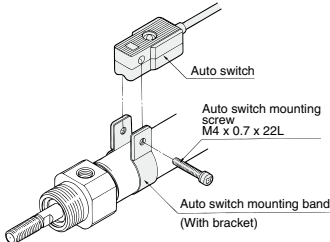

1. Put an auto switch mounting band on the cylinder tube and set it at the auto switch mounting position.
2. Put the mounting section of the auto switch between the auto switch mounting band mounting holes, then adjust the position of mounting holes of switch to those of mounting band.
3. Lightly thread the auto switch mounting screw through the mounting hole into the thread part of band fitting.
4. After reconfirming the detection position, tighten the auto switch mounting screw to secure the auto switch while properly contacting the auto switch bottom part and the cylinder tube. (The tightening torque of M4 screw should be about 1 to 1.2 N·m.)
5. Modification of the detection position should be made in the condition of 3.

<Applicable auto switch>

Solid state D-H7A1, D-H7A2, D-H7B, D-H7BA
 D-H7C, D-H7NF, D-H7NW, D-H7PW
 D-H7BW
 Reed D-C73, D-C76, D-C80, D-C73C, D-C80C

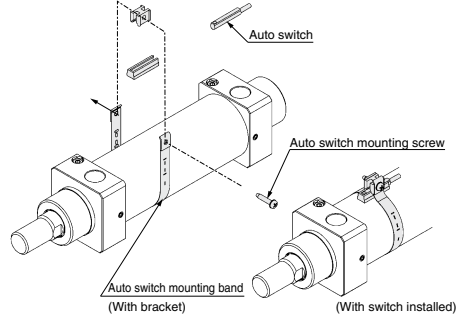


* Band (c) is mounted so that the projected part is on the internal side (contact side with the tube).

1. Wrap the auto switch mounting band around the cylinder where the auto switch will be mounted without bending the reinforcing plates.
2. Hook the bent part of the auto switch mounting band reinforcing plates onto the upper surface of the switch. Bend the base of the auto switch mounting band reinforcing plates until the through holes of the switch bracket, the through holes of the auto switch mounting band, and the holes of the M3 female thread are aligned. Adjust the switch bracket so that both ends of the auto switch mounting band are inserted into the inner walls on both side surfaces of the switch bracket.
3. Lightly thread the auto switch mounting screw through the mounting hole into the thread part of the auto switch mounting band fitting.
4. After setting the whole body to the detecting position by sliding, tighten the auto switch mounting screw to secure the auto switch while properly contacting the auto switch bottom part and the cylinder tube. (Tightening torque of M3 screw should be 0.8 to 1 N·m.)
5. Modification of the detection position should be made in the condition of 3.


How to Mount and Move the Auto Switch

Caution

1. Tighten the screw under the specified torque when mounting auto switch.
2. Set the auto switch mounting band perpendicularly to cylinder tube.



Mounting correctly



Mounting incorrectly


<Applicable auto switch>

Solid state D-G39, D-K39


Reed D-A33, D-A34, D-A44

How to Mount and Move the Auto Switch

D-A3, D-G3/K3 type

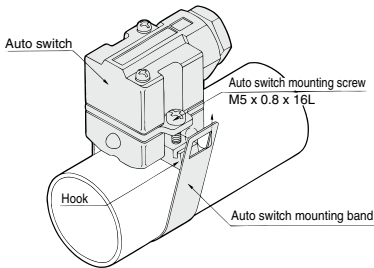

D-A4

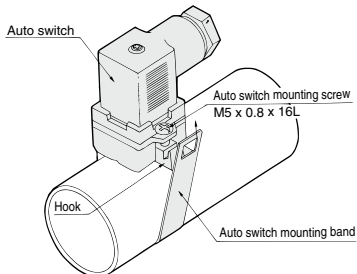

1. Loosen the auto switch mounting screws at both sides to pull down the hook.
2. Put an auto switch mounting band on the cylinder tube and set it at the auto switch mounting position, and then hook the band.
3. Screw lightly the auto switch mounting screw.
4. Set the whole body to the detecting position by sliding, tighten the mounting screw to secure the auto switch. (The tightening torque should be about 2 to 3 N·m.)
5. Modification of the detecting position should be made in the condition of 3.

CHQ

CHK

CHN

CHM

CHS

CH2

CHA

Related Products

D-